
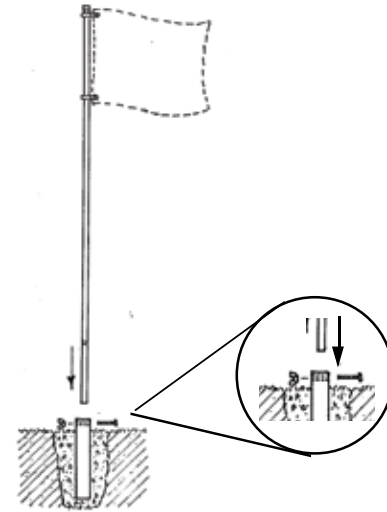


Ground Mounted Flag System Installation Instructions

CAUTION! Be sure there are no underground wires or utilities before digging holes!

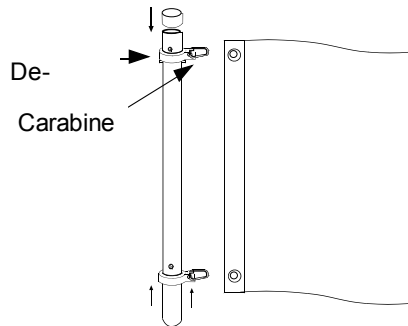

TOOL REQUIRED : Post hole digger or shovel

- Select locations for flag poles. Choose the locations that will offer advantage. Space at least 6 ft apart, so flags will not touch adjacent flag poles too far apart.
- Slide (1) De-Furling ring over the top of the pole until it rests on the pin. Then place the white cap on top of the pole. Slide the other De-Furling ring onto the pole from the BOTTOM.
- Fasten the flag to the pole using the Carabineer clips which are attached to the De-Furling Rings.
- For each pole location, dig a hole approximately 20-22" deep, and 6-8 inches wide.
- Place a section of PVC plastic sleeve into each hole. The hole in each sleeve section marks the top end. Pack dirt, gravel, or ready mix concrete around the sleeve. Keep the sleeve as plumb as possible. Keep about 2" of sleeve above ground level, so that the hole is left exposed (see figure).
- **Tip:** insert the flag pole into the pipe, and use a level on several sides of the pole to check for plumb.
- With the PVC pipe properly placed and secure, insert bottom of flag pole into it. Line up the holes at the bottom of the flag pole with the holes in the PVC sleeve, and insert the 2" bolt and wing nut, as shown.
- Back-fill the loose dirt into the hole around the PVC sleeve and pack as tightly as possible.

your overall display the best marketing poles. For maximum impact, do not space the

Manufactured in the USA by

VOXPOP
MARKETING SYSTEMS

10746 Worcester Highway P.O. Box 200
Berlin, MD 21811 800-386-9767

To prevent incidences of the cap & De-Furling ring popping off the top of the pole, screw the 1/2" screw provided into the hole as shown.

Be sure to place the upper De-Furling ring onto the pole first.

